


Assembly Instructions




FOOD BAG COMES DELIVERED FLAT

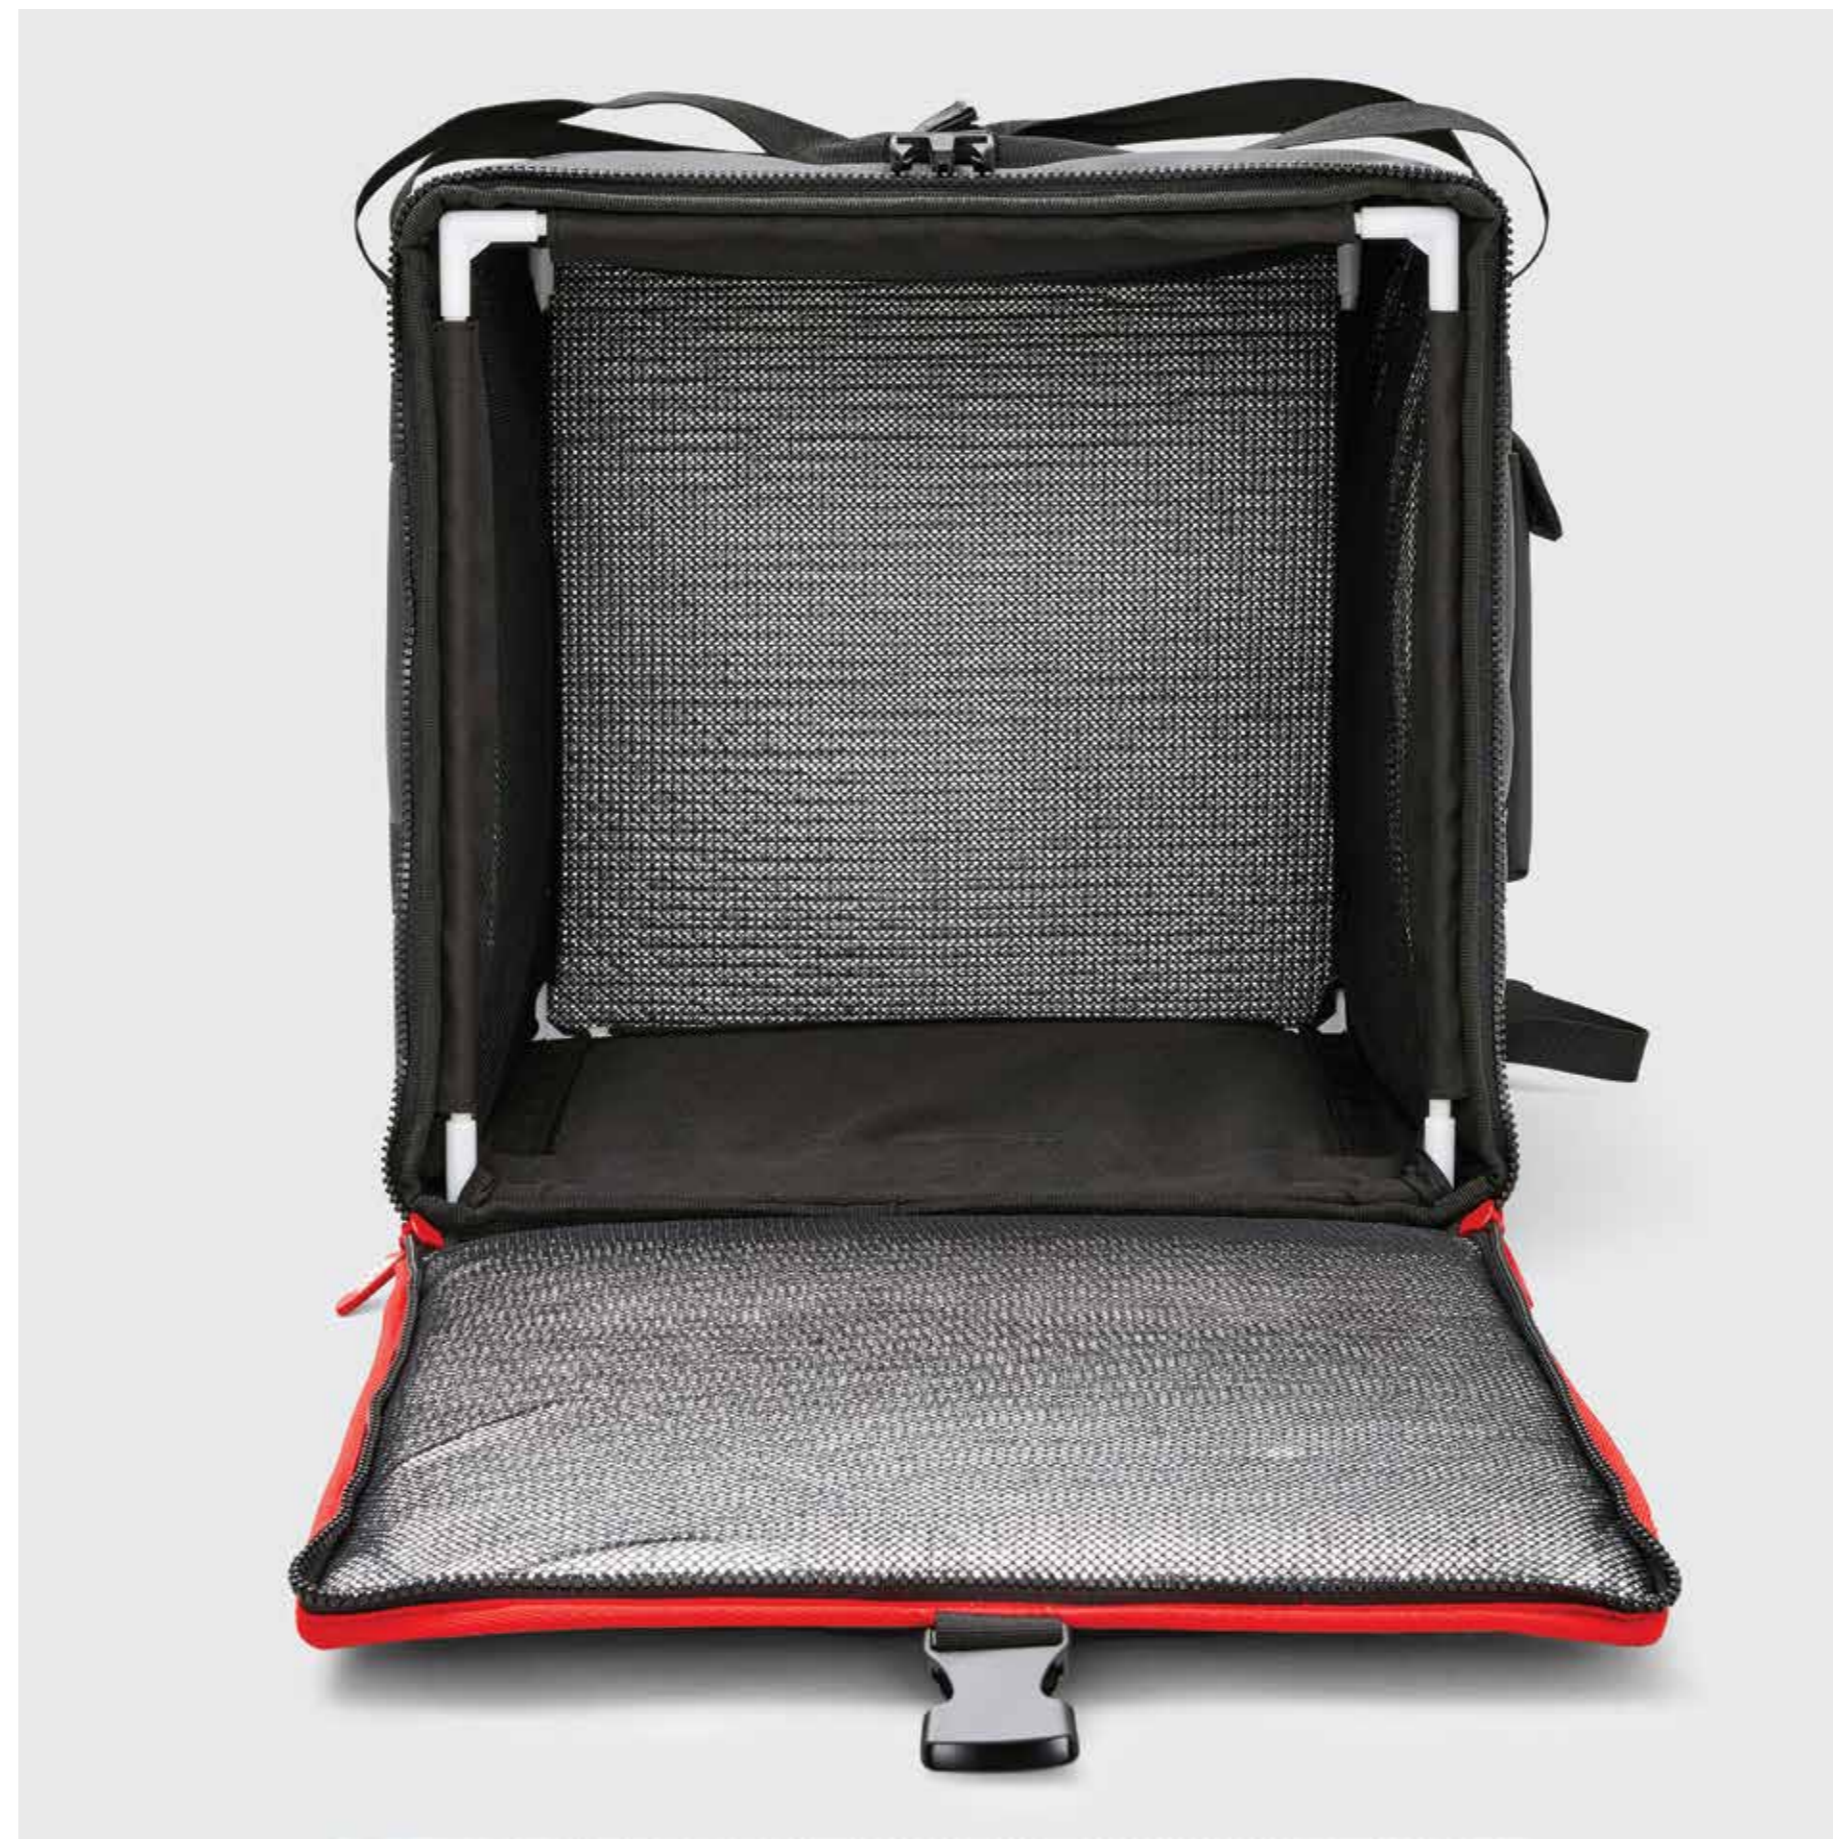

1



NYLON FRAME WILL ALREADY COME POSITIONED UNDER VELCRO FLAPS

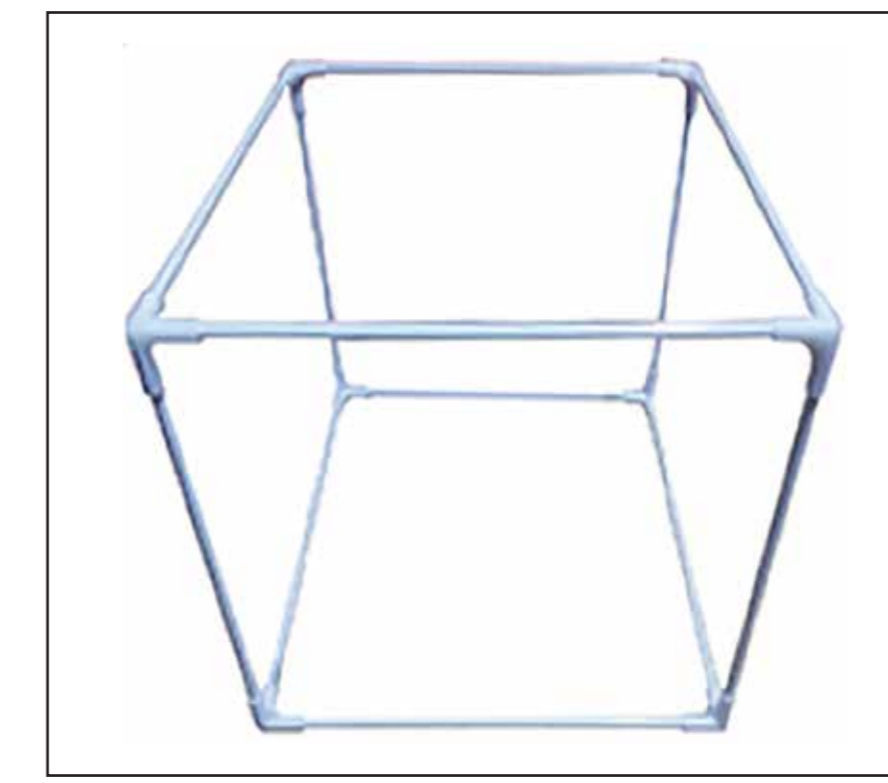

2

3

4



PULL DOOR AND REAR PANEL OUT FROM FLAT POSITION

5



FRAME PIPE COMES POSITIONED IN VELCRO FLAP

6



TAKE CORNER CONNECTORS AND SECURE PIPE FRAME

7



CREATES RIDGIDITY IN ALL 8 CORNERS

8



FIND VELCRO FLAP IN FRONT OF FLOOR PANEL

9



POSITION HEAT PAD IN POCKET WITH CABLE FACING REAR
(note - sample has Heat Pad already loaded)

10



THREAD HEAT PAD CABLE THROUGH HOLE IN FLOOR

11



PLACE HEAT PAD CABLE THROUGH RUBBER CABLE PORT

12



FIND DETACHABLE BACK PACK STRAPS SUPPLIED FLAT



CLIP TOP OF STRAPS TO METAL LOOPS AT REAR/TOP OF BAG



CLIP BOTTOM OF STRAPS TO METAL LOOPS AT REAR/BOTTOM OF BAG



FINISHED BACK PACK STRAPS